

► FAC-E | MECHANICAL DETAILS & DRAWINGS

FAC-E | Mechanical Information Table


MODEL	Overall Width (in.)	Nozzle Width (in.)	Mounting Width (in.)
FAC-1-36E	37	36	36.06
FAC-1-42E	43	42	42.06
FAC-1-48E	49	48	48.06
FAC-1-60E	61	60	60.06
FAC-2-60E	61	60	60.06
FAC-2-72E	73	72	72.06
FAC-2-84E	85	84	84.06
FAC-2-96E	97	96	96.06
FAC-3-108E	109	108	108.06
FAC-3-120E	119	118	118.06
FAC-3-132E	134	133	133.06
FAC-4-144E	146	145	145.06




NOTE

Powered Aire recommends that the junction box be installed on the same side of the opening as the door motor. The Air Controller™ will be on the opposite side. When placing an order, please include on the purchase order whether the door motor is on the left or right side of the opening.


*The drawing below is for a door motor on the right side of the opening.

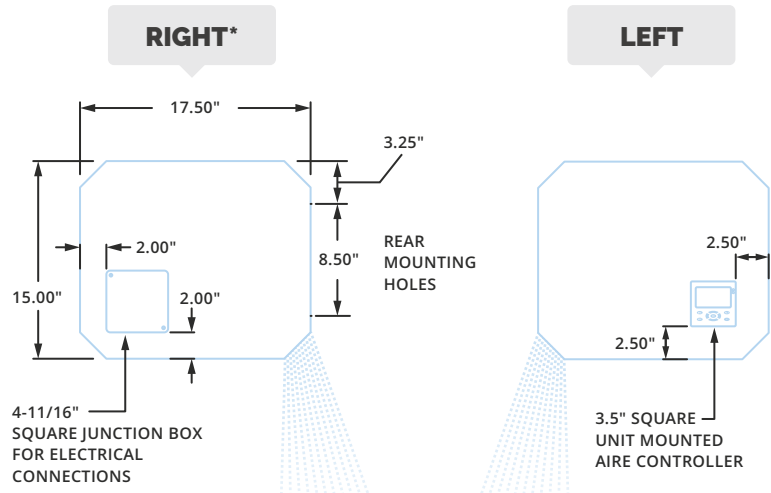

TOP

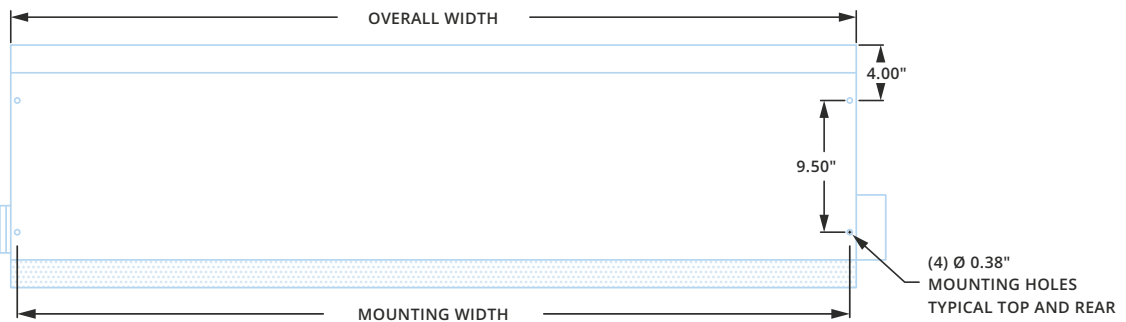

FRONT

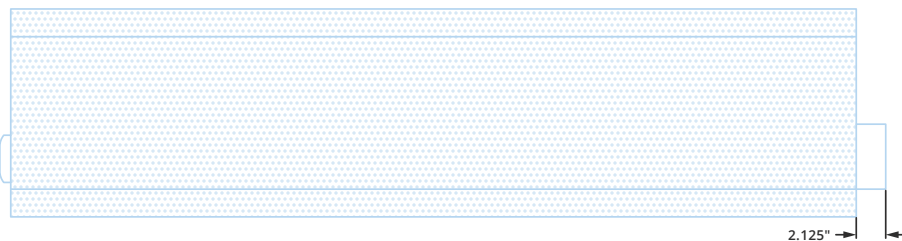

BOTTOM

