

## ► TIG | INSTALLATION


### MOUNTING

- Unit will be suspended with threaded rods. Air curtain has two holes on each end for installing one end of threaded rods.
- Model TIG requires 7/16" threaded rod. Washers and lock washers or locknuts are recommended. Mounting structure should be of sufficient strength to hold unit, and hardware (supplied by others) should be of sufficient strength and quality to support the unit safely.
- Each transition duct has two 3/8 – 16 spotnuts
- Each heater has two or four 3/8 – 16 spotnuts depending on the model.
- The other ends of the threaded rods can be attached to the ceiling.
- Additional mounting holes are provided on larger units for buildings where structural support is not adequate for supporting the air curtain from ends only.

### POSITIONING

- Heater is to be mounted separately, 2" from air curtain/transition assembly.

**FRONT**

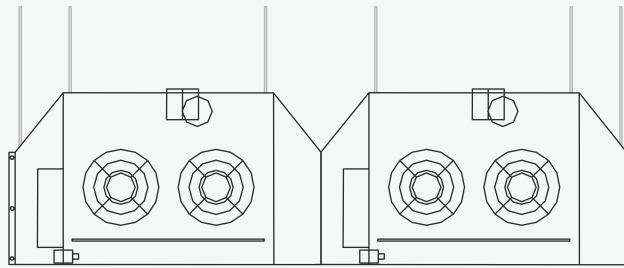

**SIDE**

Support unit heater separate from air curtain

